



to

ASTEROIDS

Operation, Maintenance, and Service Manual

Contents of this Drawing Package


Game Wiring Diagram, Coin Door and Power Supply Microprocessor **Video Generator** Switch Inputs, Coin Counter, LED and Audio Outputs

Sheet 1, Side A Sheet 1, Side B Sheet 2, Side A Sheet 2, Side B



W A Warner Communications Company

ASTEROIDS WIRING DIAGRAM (035156-01 B) +5V +5E +5E +5V +5V +5V +5V 5PK 5PK 5PK 5PK 5PK 5PK 88.3.3.60 88.3.3.60 88.3.3.60 MAIN PCB SCHEMATIC トカナカハーの ナカハー ひののつのかんかい-034988-XX + SENSE GND +5V AUDIO 2 E AUDIO 1 BU/W 6 MONITOR POWER 36 VAC X GND DIAG STEP K Y OUT 18 Y GND V BK ZOUT -T.P. START 2 (LED) 6 WIR START I (LED) 8 WIBK START I (N.O.) N W/GY START 2 (N.O.) P WIOR FIRE T WIY 4 W/V THRUST WIGN ROTATE RIGHT ROTATE LEFT WIBU W/GN 9 W/BU 10 1 FIRE THRUST ROTATE RT ROTATE LT HYPERSPACE 10 W/BN COIN L (N.O.) 13 COIN C (N.O.) 12 BN COIN R (N.O.) R OR SELF TEST L SLAM 9 GY HYPERSPACE GND Z BK L. COIN (CNTR) D VIBK R. COIN (CNTR) F BUIBK C. COIN (CNTR) 4 GN/BK OR/W / GN/BK OR/W V/BK / NOTES OR/W FOR GAMES EQUIPPED WITH A009083-XX
COIN DOOR SEE COIN DOOR WIRING DIAGRAM
030401-01 AND COIN DOOR ADAPTER HARNESS
ASSY, WIRING DIAGRAM A035319-01. VOL W/BNI USED WITH COIN DOOR ASSY. A009083-XX CONTROL

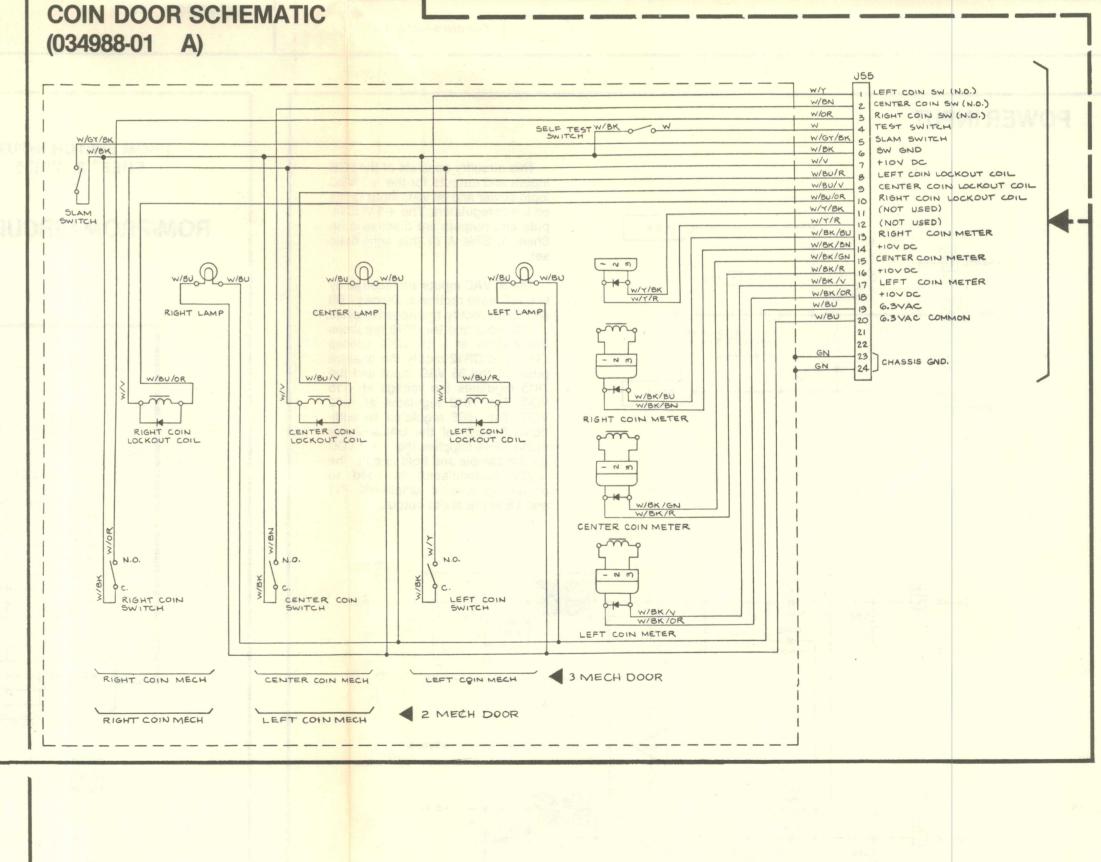

denotes a test point

© 1979 Atari, Inc.